



DURAFLAP INSTALL DIRECTIONS FOR FORD REAR DRILLESS MUDDLAPS 2011– 2014, F-150 with Flares and Liner



Supplied hardware: 6- Stainless Steel Black Oxide (SSBO) 1/4-20 x 1 1/4" bolts; 4- Flange Nuts; 6- 1/4" SSBO washers; 2- 1/4" anodized u-clips; **4- Flat clips #10001**



NOTE: *As you progress with the install, check for squareness and plumbness of the mudflap to the tire.*

- Step 1: Un package your new rear mud flaps. Smooth side is toward the rear with the grooved side toward the tires.. If applicable, Stainless Steel weights face rearwards.
- Step 2: Remove the factory plastic push pin located at point (A).
- Step 3: Slide the U Clip over the fender well lip at point A with the threaded side to the rear and align the factory hole with the threads in the U Clip. You may have to start higher up on the fender well, and slide the u-clip down into place.
- Step 4: Attach the flat clip to the back (smooth) side of the mud flap at holes (B) and (C). Slide the hex bolt thru the washer, thru the tire side of the mud flap (side with grooves), thru the flat clip with the bent end toward the mud flap and secure it with the flange nut. Leave loose for now.
- Step 5: Place the mud flap into the desired fender well and match up the pre drilled hole in the flap with the factory hole in the truck fender well lip at point (A).
- Step 6: Insert a 1/4-20 bolt thru a washer and then the flap, hand thread it into the U Clip at point (A). Leave it slightly loose for now.
- Step 7: Slip the bottom longer end of the "FLAT CLIP" over the edge of the fender well liner at point (C) and tighten the bolt causing the clip to grip the liner. Leave slightly loose for now.
- Step 8: Slip the bent end of the "FLAT CLIP" over the bottom edge of the fender flare at point (B) and tighten the bolt firmly causing the clip to grip the flare. Leave loose for now.
- Step 9: Check the alignment of the mud flap, then tighten the bolts.

NOTE: Recheck every three months and retighten bolts if necessary.

IF YOU HAVE ANY QUESTIONS OR CONCERNS PLEASE GIVE US A CALL AT 541-245-9148

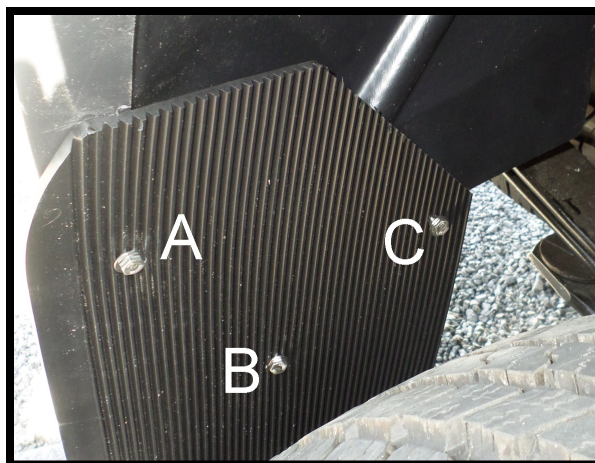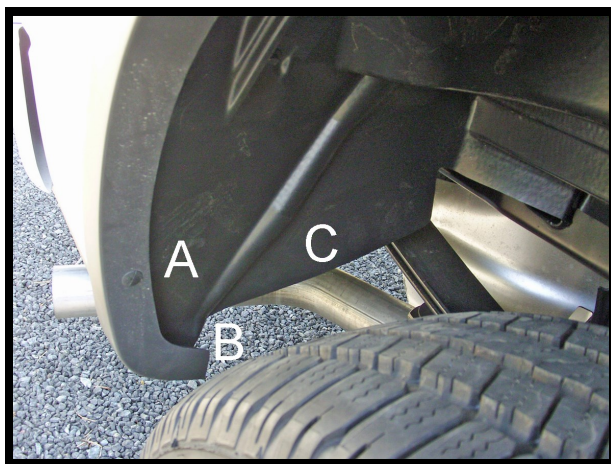

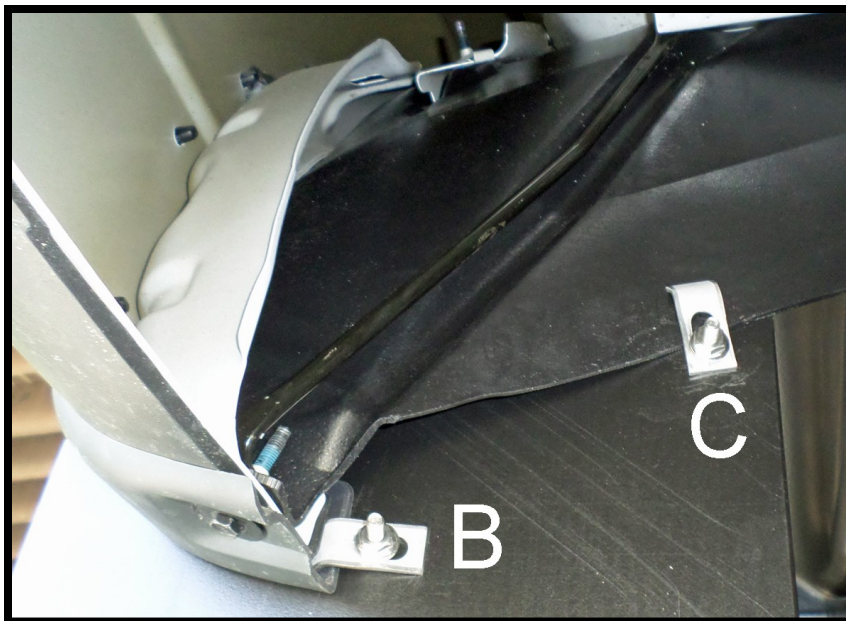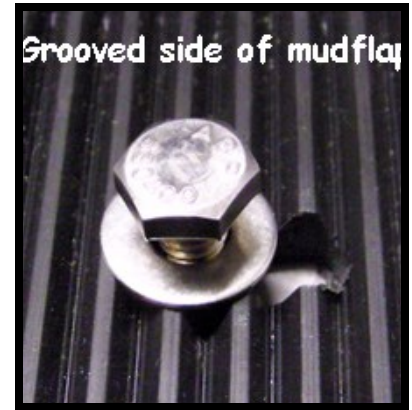

FR12 11 150 WF WL, FR12L 150 WF WL, FR14 11 150 WF WL, FR14L 11 150 WF WL
4- Flat clips #10001