


Included Hardware:

(TF 12 08)

- (10) #14 x 1" (SSBO) Slotted hex screws
- (10) 1/4" (SSBO) washers
- (2) Front mud flaps

Installation Steps:

1. PARK VEHICLE ON LEVEL WORK AREA.
2. Unpack and verify all parts are included per list above. ***If anything is missing, please call DuraFlap at the number below.***
3. Remove the 5 factory screws and splash guard if installed. Align the holes in flap to the factory holes and secure the flap with the provided screws and washers.

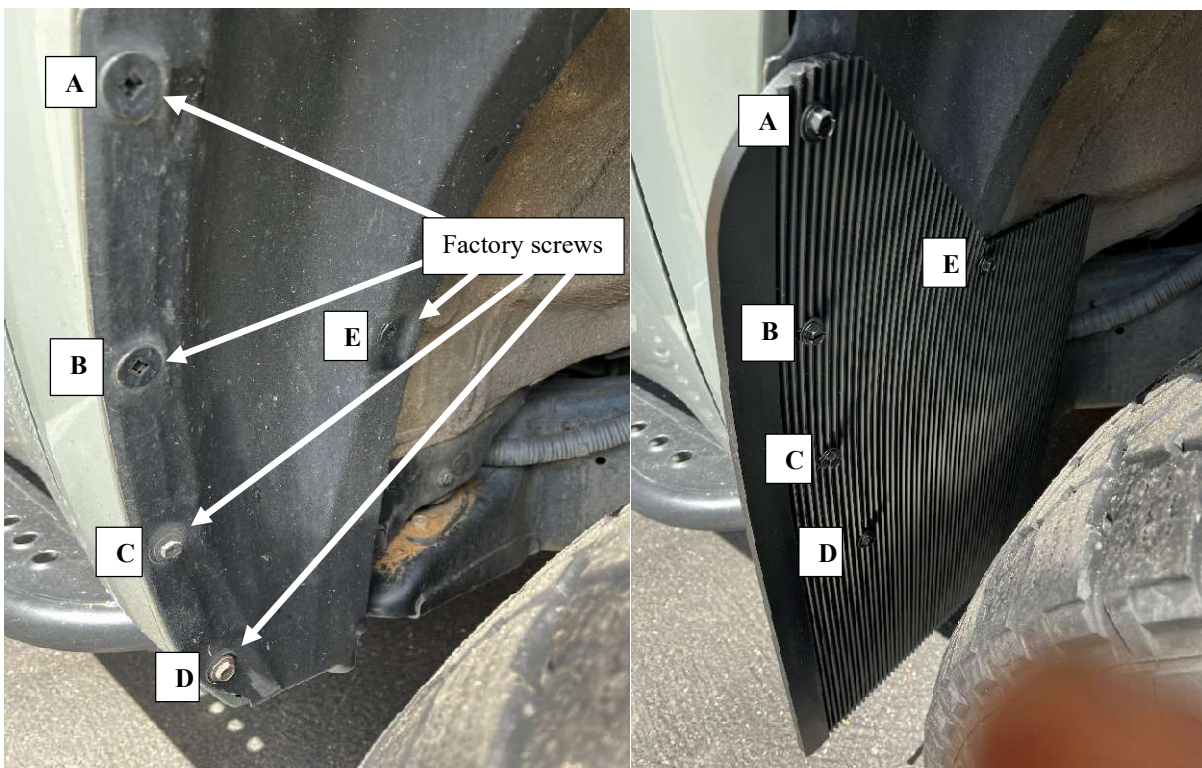

NOTE: Check bolts and screws for tightness every two months.

If you have any questions, give us a call. (541) 245-9148