



2021 - Current Ram 1500 TRX Front Drill-less Mud flap Installation

Supplied Hardware:

10 - Stainless Steel Black Oxide (SSBO) #10 x 1.25" screws; 10- (SSBO) #10 washers;

As you progress with the install, check that the mud flap remains square and plumb to the tire.

Step 1: Unpack your new mud flaps. Smooth side faces to the rear, grooved side faces the tire. If applicable, Stainless Steel weights face to the rear.

Step 2: Remove the factory screws located at points (A), (B), (C), (D), and (E).


Step 3: Place the mud flap into the fender well, adjust the flap into place by lining up the holes in the mud flap with the factory holes and secure the flap with the #10 screws with washers at holes A,B,C,D and E.

Step 4: Recheck alignment and tighten all screws and bolts .

NOTE: Recheck every three months and retighten if necessary.

Apply moisture such as furniture polish or vinyl treatment twice a year.

IF YOU HAVE ANY QUESTIONS OR CONCERNS PLEASE GIVE US A CALL AT (541) 245-9148

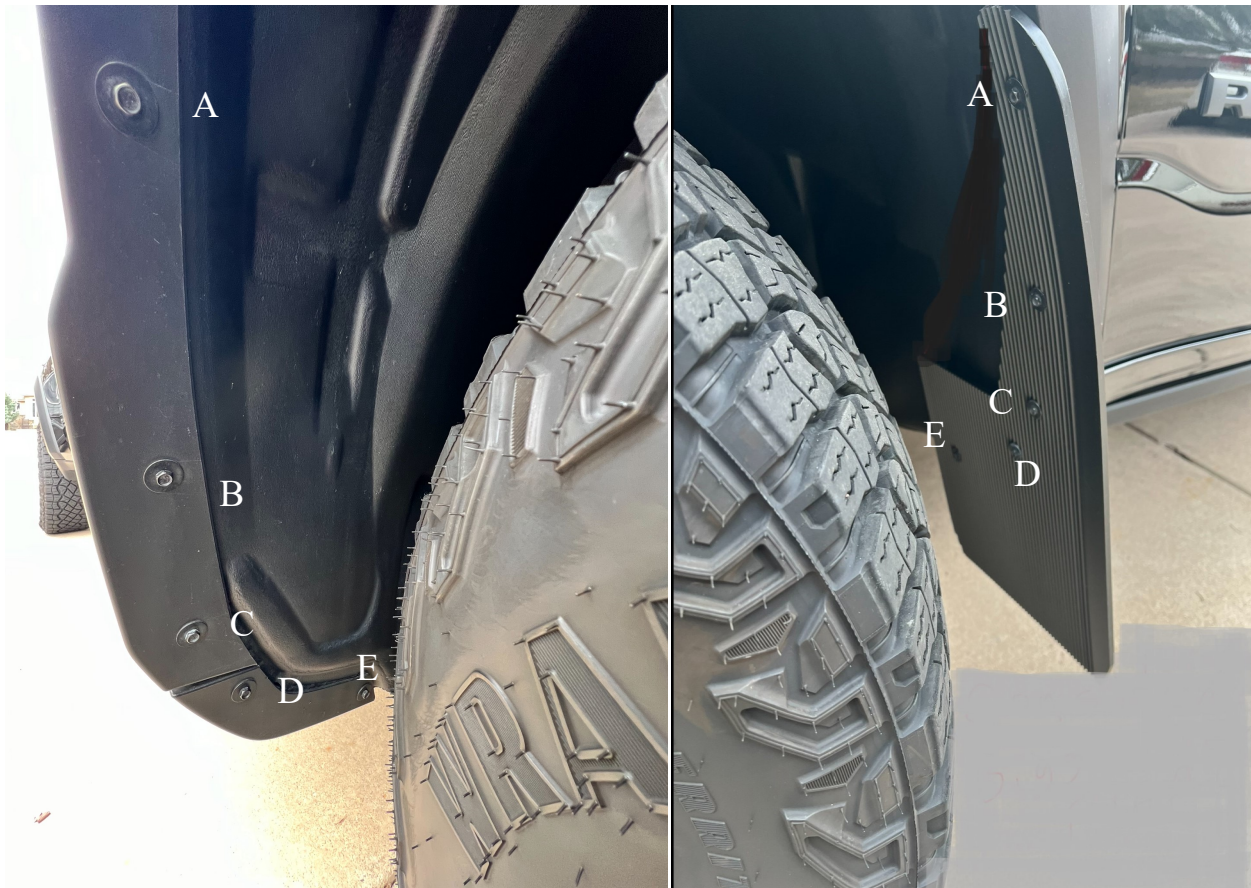

DF12 21 1500 TRX, DF14 21 1500 TRX