


Measurement #1

Needed for All Motorhome Mud Flaps

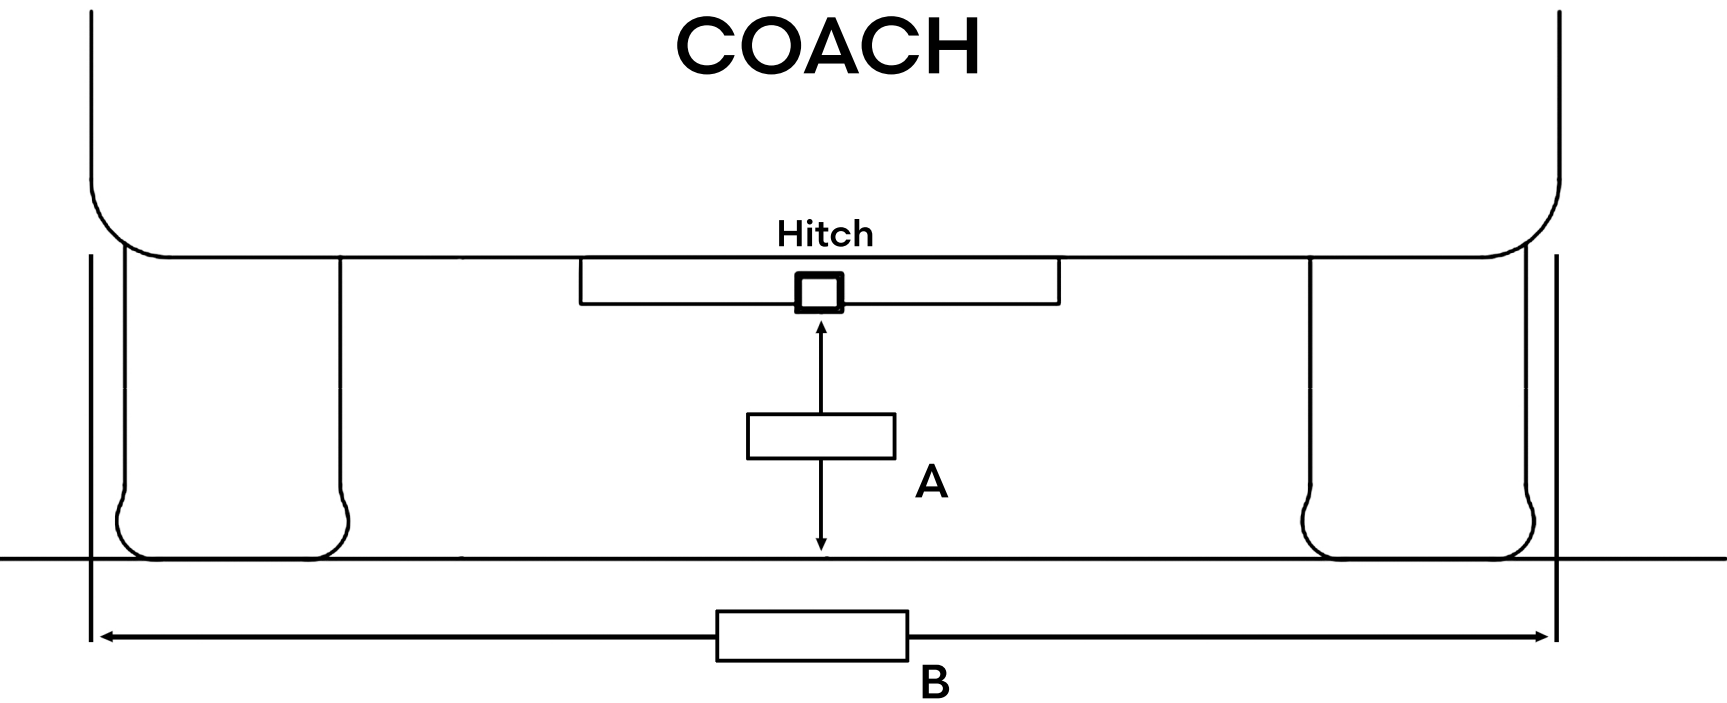

Lowest Point to the ground
(Usually the Hitch)

Measure from the lowest point on the coach (usually the hitch) to the ground.
From this measurement we calculate the mud flap
and weight size for your vehicle.

We subtract 6 inches, from the measurement.
This provides 2" clearance between the lowest point
and the top of the mud flap (required for swing),
and 4" clearance between the bottom of the mud flap and the ground.
(Minimum Recommended Clearance)

