



Directions for Dodge 2016—Current 2500/3500 Single Rear Wheel Drill-less Installation

Supplied Hardware:

2- Stainless Steel Black Oxide (SSBO) 1/4x20x1” Bolts; 4- SSBO 1/4” Washers; 2- SS Nylok Nuts; 4- SSBO #10 smaller washers; 4- small anodized U clips; 4- #10 x 1.25 SSBO Screws;

2- “S” brackets #10010

We recommend using thread locker on all screws

NOTE: *As you progress with the install, check that the mud flap remains square and plumb to the tire.*
We recommend thread locker to be used on all fasteners.

- Step 1: Un-package your new mud flaps. Smooth side is rear side, with rain grooved side facing tire, and tapered corner on top is outside top edge. If applicable, Stainless Steel weights face rearwards.
- Step 2: Remove the factory screws located at points (A) and (B), and save to re-install with the mud flaps.
- Step 3: There should be factory u-clips already on the fender well liner behind the factory holes. If not, or if one breaks, replace with the supplied u-clips at points A and/or B with the threaded side toward the back of the truck.


NOTE: We have supplied Stainless Steel screws and washers that may be used in place of the factory Screws, if necessary.

- Step 4: Start the first screw thru the smaller diameter washer into the bottom hole “B” of the mud flap and thru the factory hole (B). Finger tighten only.
- Step 5: Repeat step 4 at point A. Only finger tighten at this point.
- Step 6: Align the mud flap to be straight with the tire both vertically and horizontally and tighten the screws at points A and B. **If this step is not done the S bracket will not fit correctly.**
- Step 7: Line up the S bracket behind the fender well liner at point “D” as shown on the back.
- Step 8: Attach the bracket at point C by placing the 1/4-20 bolt thru the washer, the mud flap, thru the bracket, thru another washer, and attach it with the Nylok nut.



NOTE: **Recheck every three months and retighten if necessary..**

Apply moisture such as furniture polish or vinyl treatment twice a year.

IF YOU HAVE ANY QUESTIONS OR CONCERNS PLEASE GIVE US A CALL AT 541 245-9148



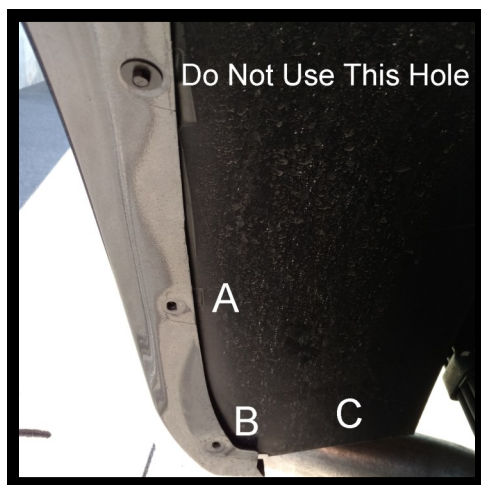


2016-2018 Pre Install

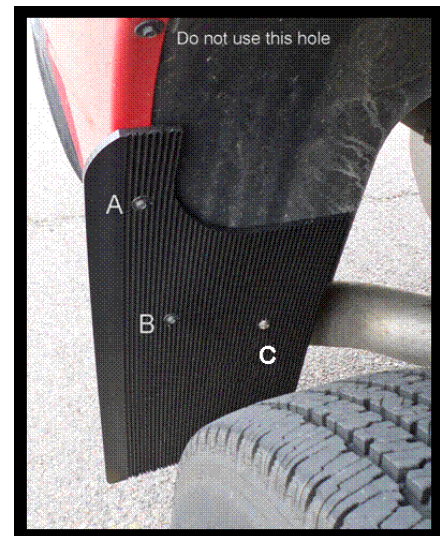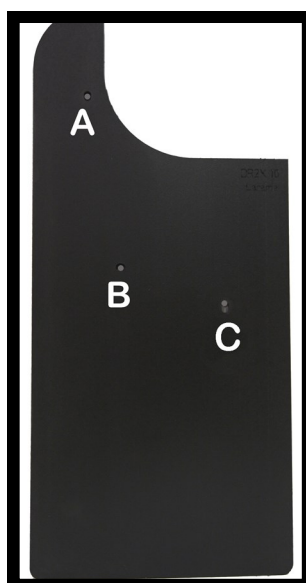

DR12 16, DR12L 16, DR14 16, DR14L 16

2- “S” brackets #10010

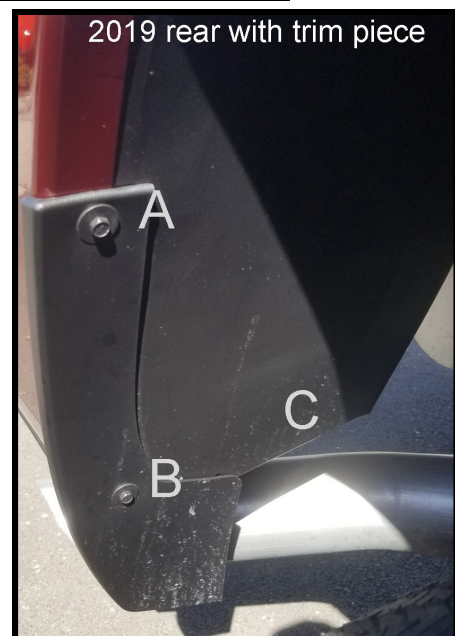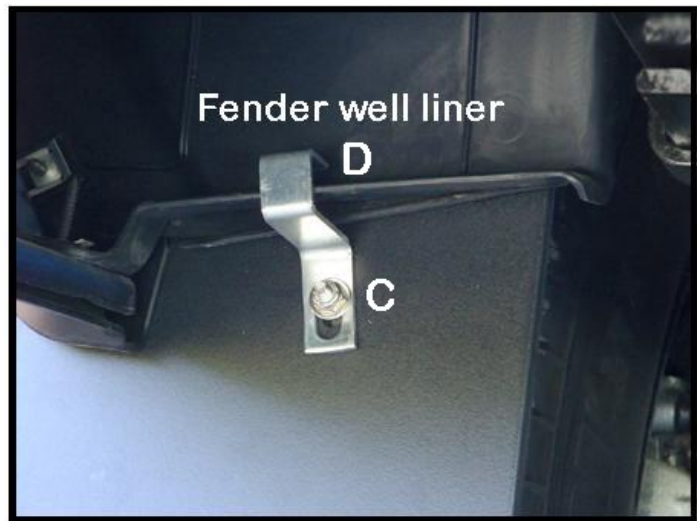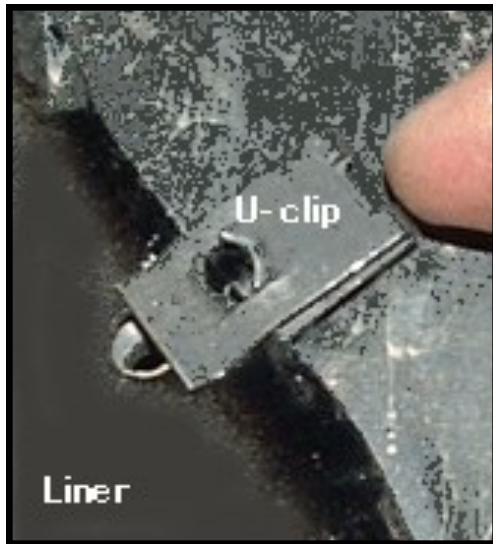

2019 Ram 2500/3500 rear with flares pre install

2019 Rear without flares
With trim piece