



Pre-drilled installation 2019 -current Chevy 1500 Single Rear Wheel Mud Flaps

Hardware: 10- #10x 1.25 Stainless Steel Black Oxide (SSBO) screws; 14- #10 (SSBO) washers;
6- #8 x 1.25 (SSBO) screws; 2- plastic white nuts; 2- small plastic round spacers.
2- (2019 1500 Chevy Brackets) Aluminum flat brackets #10026; 8 small u-clips attached to brackets.

Thread locker is recommended on all screws.

Step 1: Un package your new rear mud flaps. Smooth side is rear side, tapered corner on top is outside top edge. If applicable, Stainless Steel weights face towards the rear of the vehicle.

Note: If in place, remove any splash guard.

Step 2: Remove factory screws at point A and B.

Step 3: Bend the bracket slightly to fit the curve of the fender well.

Step 4: Attach the bracket to the back (smooth) side of the mud flap at points D,E and F.

Use #10 screw thru a washer - ribbed side of the mud flap - bracket. Leave these loose for now.

Do not install the screw at point G yet.

Note: The flat side of the u-clip goes towards the flat side of the mud flap.

Note: If you have fender well liners, you will need to remove the factory screw at point C and skip to step 6.

Step 5: Insert the white plastic nut into the factory hole at point C. It will just push into place.

Step 6: Slip the edge of the bracket behind the fender well lip and over the factory clips at points A and B.

Check alignment and tighten bolts, leaving them slightly loose.

Step 7: Use #8 screws thru washers at points A and B. Leave them loose for now.

Step 8: Attach the mud flap at point C with a #10 Screw thru washer - Mudflap - Spacer - Bracket - supplied white nut. Use a # 8 screw if you have a factory nut insert installed from factory.


Step 9: Secure point G with a #10 Screw & washer. Leave slightly loose.

Step 10: Check alignment and tighten in order A, B, C. Then tighten D, E, F, G just enough to form the flap to the fender well.

NOTE: Recheck every three months and retighten bolts if necessary.

Add moisture to your mud flaps at least twice a year using furniture polish or vinyl or leather treatment.

If you have any questions, problems or concerns please phone us at (541) 245-9148

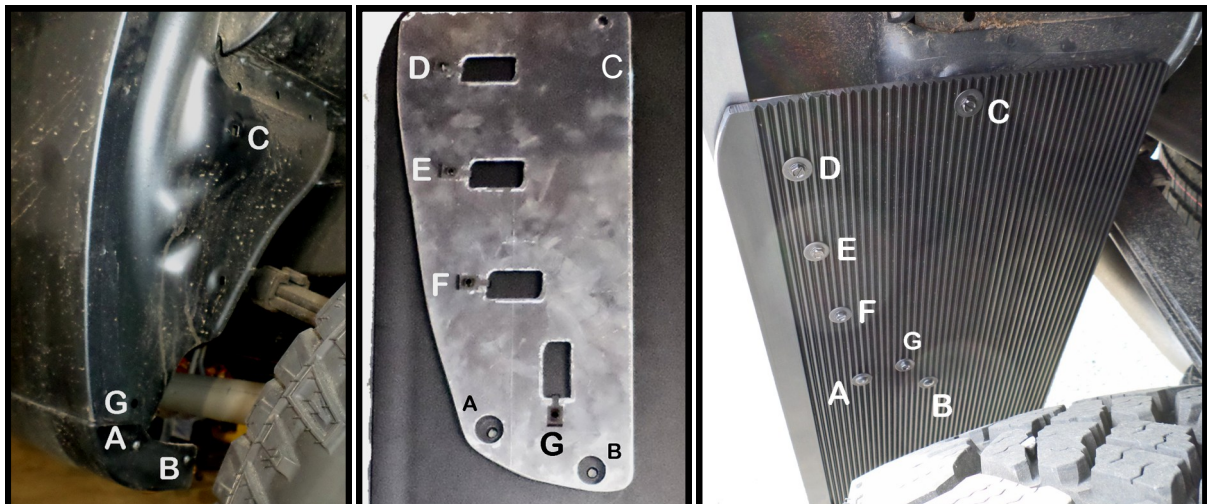

CR12 19 1500 CR12 22 1500 ZR2 2- (2019 1500 Chevy Brackets #10026)

