



2019 – 2022 Ford Ranger Front Drill-less Mud flap Installation

Supplied Hardware:

2- Stainless Steel Black Oxide (SSBO) 1/4-20 x 1" bolts; 6- (SSBO) 1/4" washers;
4- (SSBO) Nylok Nuts; 4 - Aluminum (AL) 1/4" washers; 2- (SS) 6mm x 1.25" Bolts; 2- (SS) 6mm Nyloks
2- (SS) T brackets # with 1/4-20 x 5/8" stud; 2 - Aluminum (AL) L-Brackets #10012

If you have aftermarket flares let DuraFlap know when ordering.

As you progress with the install, check that the mud flap remains square and plumb to the tire.

Step 1: Unpack your new mud flaps. Smooth side faces to the rear, grooved side faces the tire. If applicable, Stainless Steel weights face to the rear.

Step 2: Measure down 8" from the factory hole shown as **Point E**. (Image on back)

Step 3: Insert the T-bracket as shown between the liner and the fender well lip with the stud facing outward.

NOTE: This will take some handling. You will want to push the liner inward and pull slightly on the fender well flare to fit the tab into place.

Step 4: Attach the L Bracket under the door panel. At **Point D** remove the factory bolt and replace it with the supplied 6mm (SS) bolt keeping the factory washer against the AL pinch weld. Slide the supplied (AL) washer onto the end of the bolt at **point D**, slip the long end of the L-bracket over the bolt, then secure it with another (AL) washer and the 6mm(SS) nylok nut. Leave slightly loose for now.

Step 5: Place the mud flap into the fender well and slide the tab of the mud flap (**See picture on back**) into the open square tubing at **Point C**. Adjust the flap into place by lining up the holes in the mud flap with the stud at **Point A**.

Step 6: Attach the mud flap at **Point A** with the supplied black washer and nylok. Leave slightly loose.


Step 7: Attach the mud flap to the L-Bracket at **Point B** using the supplied black bolt going through the black washer, through the mud flap at Point B through the L- bracket, and being secured with the supplied black washer and nut.

Step 8: Recheck alignment and tighten all bolts .







NOTE: Recheck every three months and retighten if necessary.

Apply moisture 2 times a year. This can be furniture polish, vinyl treatment or any preservative.

IF YOU HAVE ANY QUESTIONS OR CONCERNS PLEASE GIVE US A CALL AT (541) 245-9148

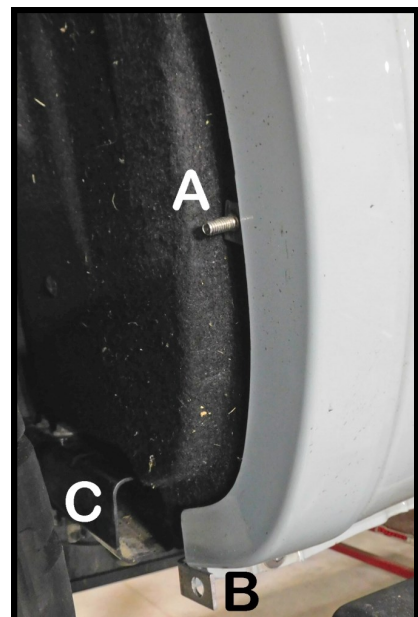

FF12 19 Ranger 2- (SS) T brackets # with 1/4-20 x 5/8" stud; 2 - Aluminum (AL) L-Brackets #10012

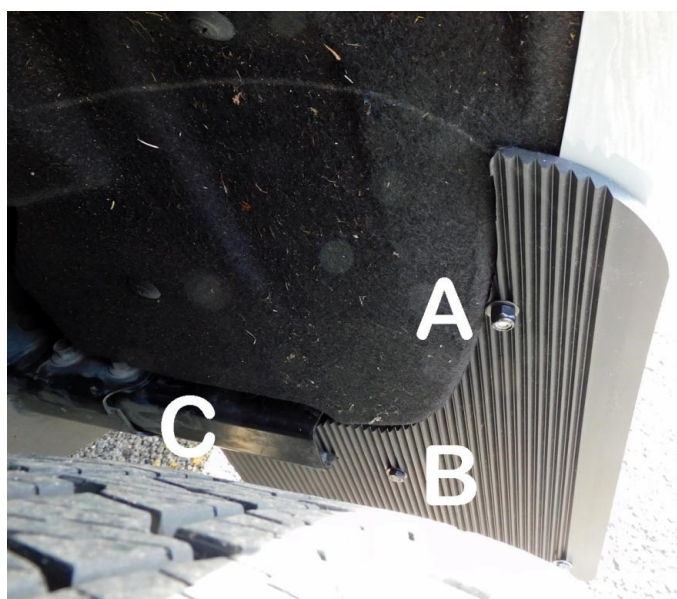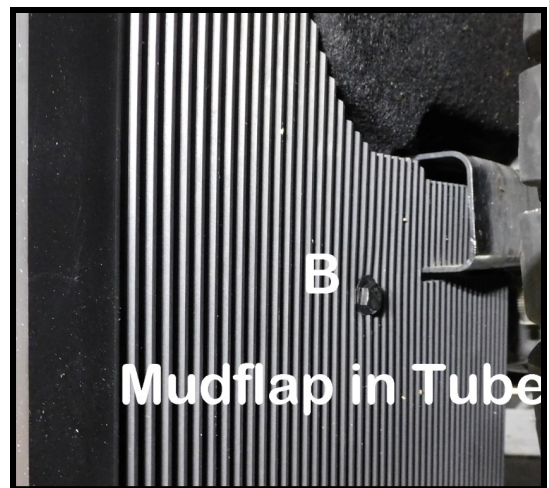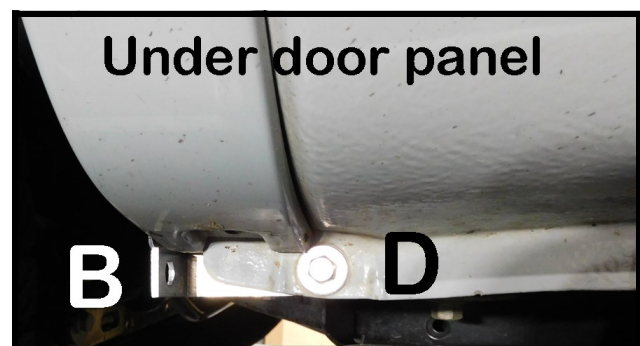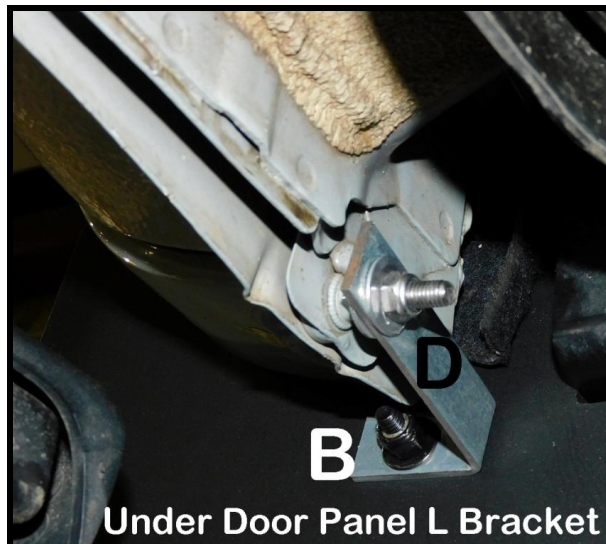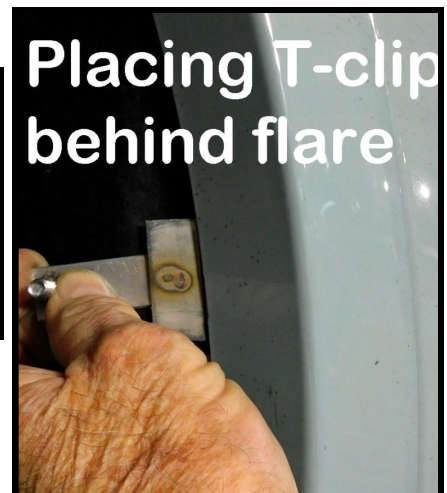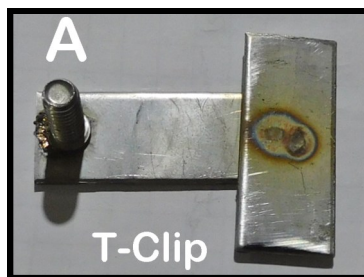

FF12 19 Ranger 2- (SS) T brackets # with 1/4-20 x 5/8" stud; 2 - Aluminum (AL) L-Brackets #10012