

Included Parts:

- (6) #8 x 1 1/4" (SSBO) screws
- (6) #10 x 3/4 (SSBO) washers
- (4) #8 u-clips
- (2) 10016 flat clips (with u-clips installed)
- (2) Front mud flaps


Installation Steps:

Threadlocker is recommended for all screws and bolts

1. PARK VEHICLE ON LEVEL WORK AREA.
2. Unpack and verify all parts are included per list above. **If anything is missing, please call DuraFlap at the number below.**
3. Completely remove the 3 factory push pins (A, B & C).




4. Pull the fabric liner away slightly and install #8 u-clips at A & B (smooth side towards the felt).

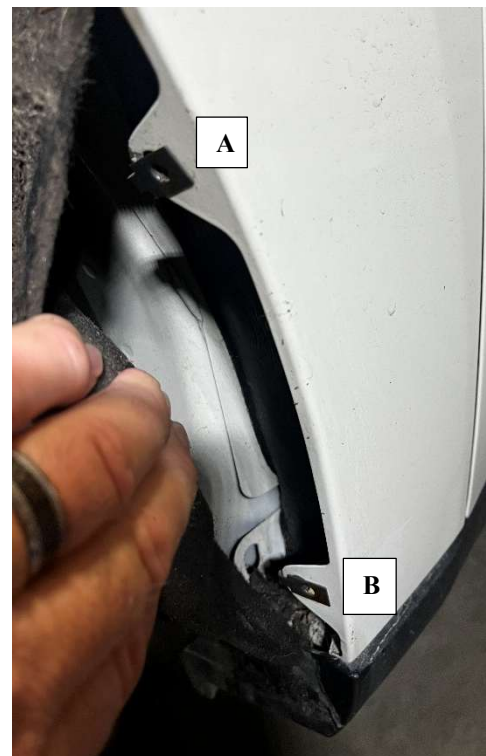

Ford Maverick, 2022-current Mud Flap Installation Front

5. Slide 10016 flat clip (smooth side towards the trim) behind plastic trim and temporarily align hole with #8 screw at C.

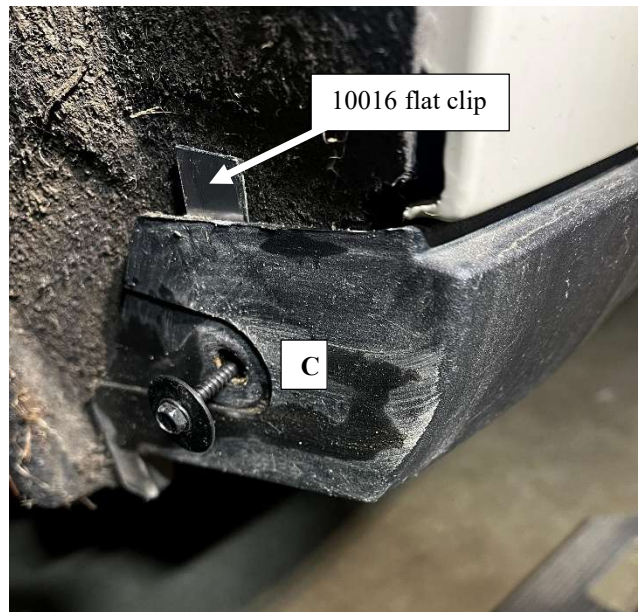

6. Align the holes in flap to the factory holes and secure finger tight with the provided screws and washers.
7. Align the mud flap to be plumb, then tighten screws.

NOTE: Check bolts and screws for tightness every two months.

If you have any questions, give us a call. (541) 245-9148